


Cassette Installation



Fig 13

- From inside the vehicle place the cassette Unit (Part B) over the outer cassette (Part A) making sure it is level then mark the mounting hole locations (Fig 15)
- Screw the cassette unit (Part B) with the screws provided to the timber frame, making sure that the blackout blinds are at the bottom and close upwards.

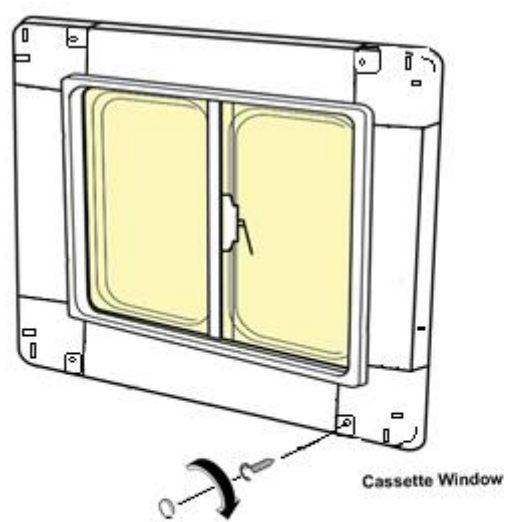

Tight all the screws of the cassette window

Fig 14

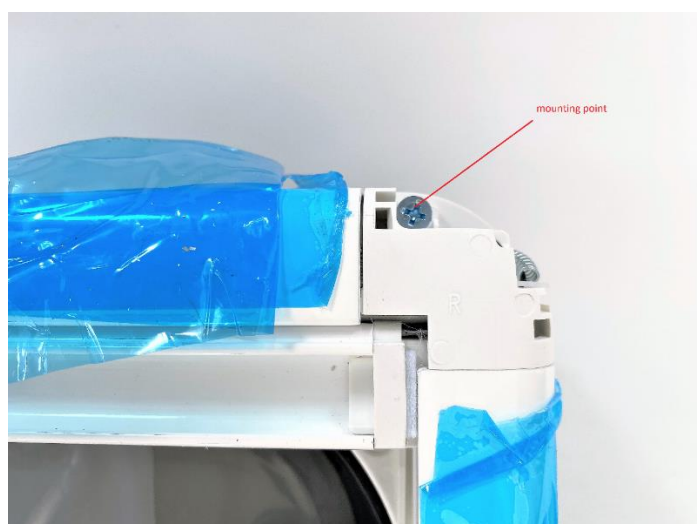


Fig 15

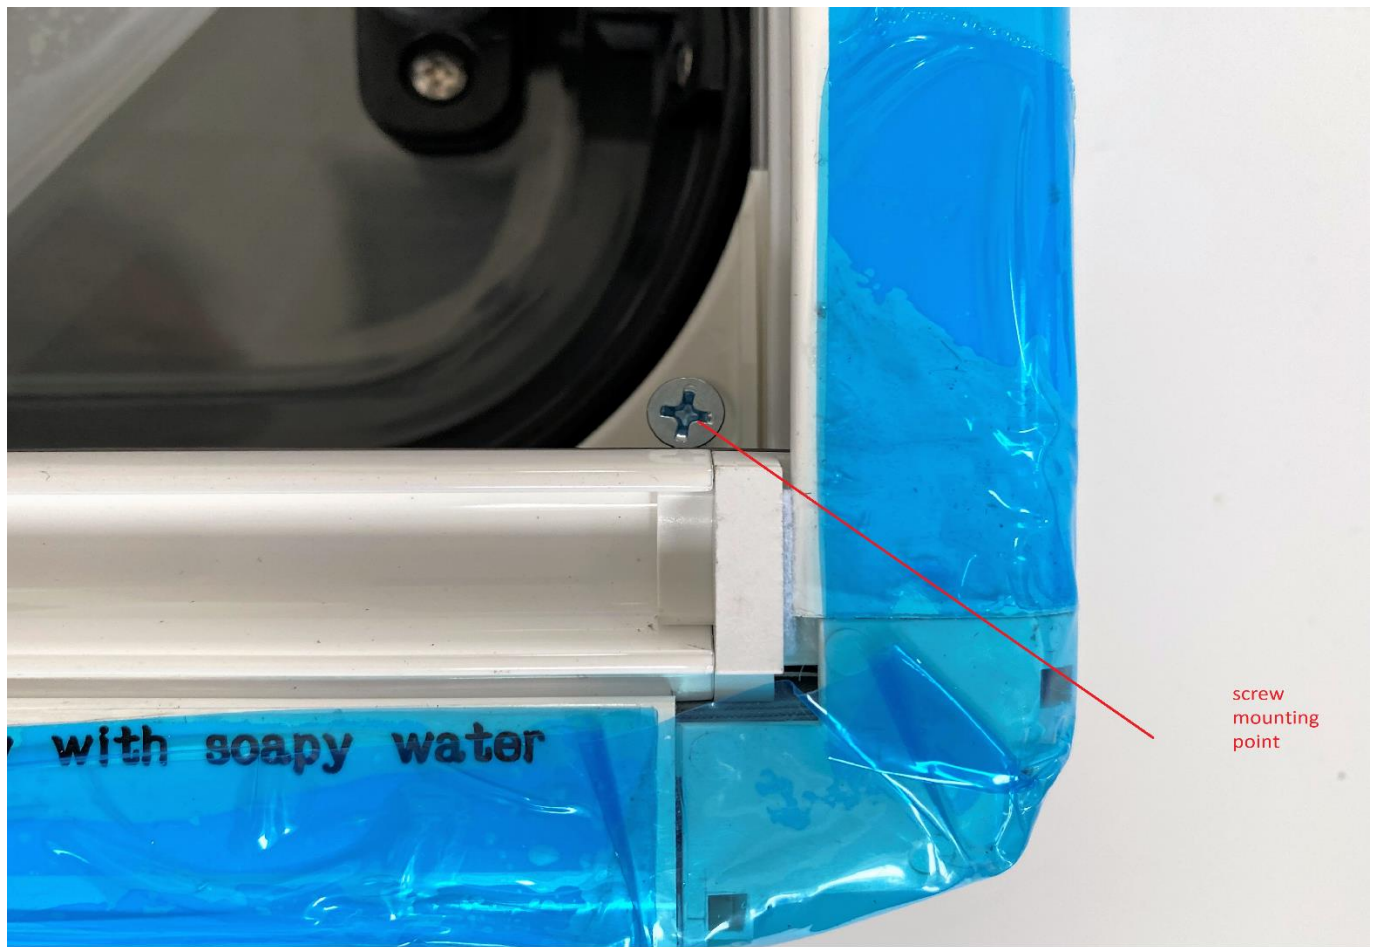


Fig 16



Fig 17

- Fit the corner end cap to the cassette frame (Part B) by pushing them in the slots –Please note the R mark on the cassette (Fig 19) must match up with the R on the cassette corner cap (Fig 20) and the L with the L

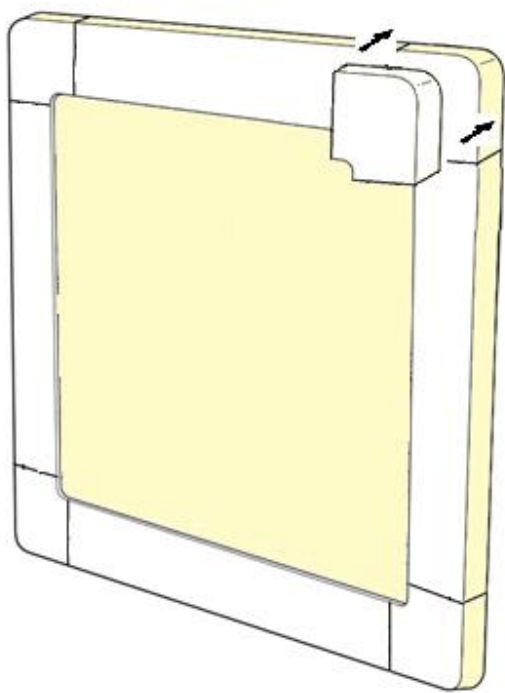


Fig 18



Fig 19



Fig 20



Fig 21

- Check that the fly screen and the blackout blind work freely

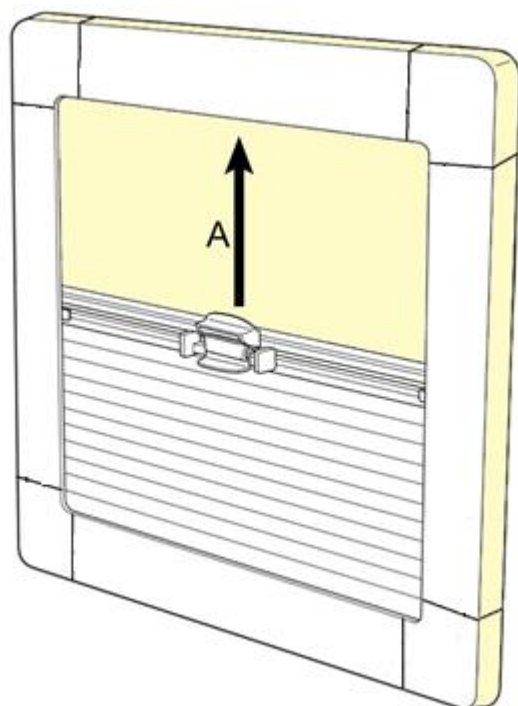


Fig 22



Fig 23

Finally, peel off the protective film from the outer cassette