

Cassette Installation

- Pull the ribbons from the cassette frame (Part 4) taking out the infill strips (F25) to expose the pre drilled holes.

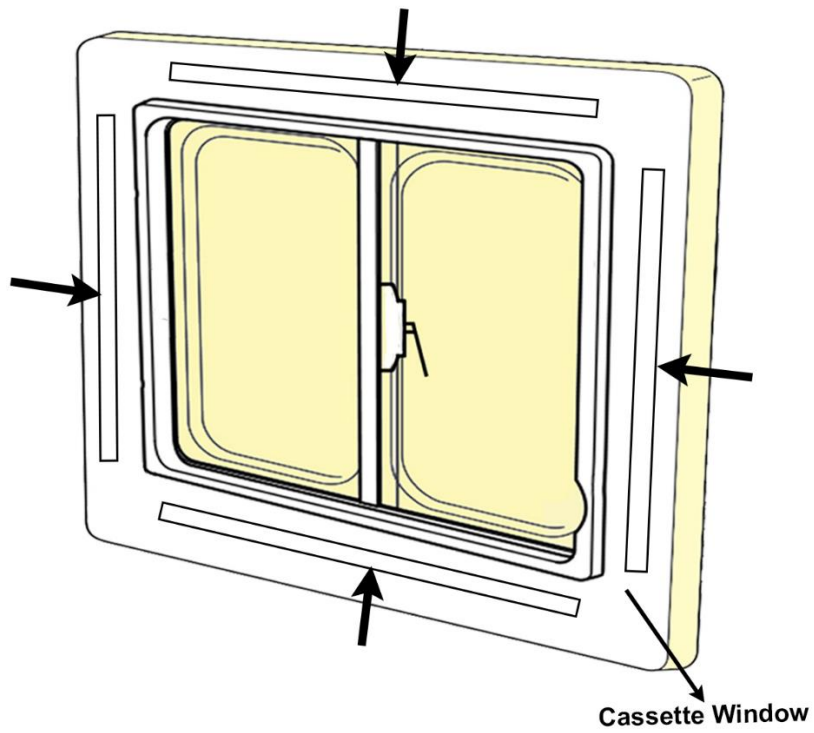


Fig 25



Fig 26

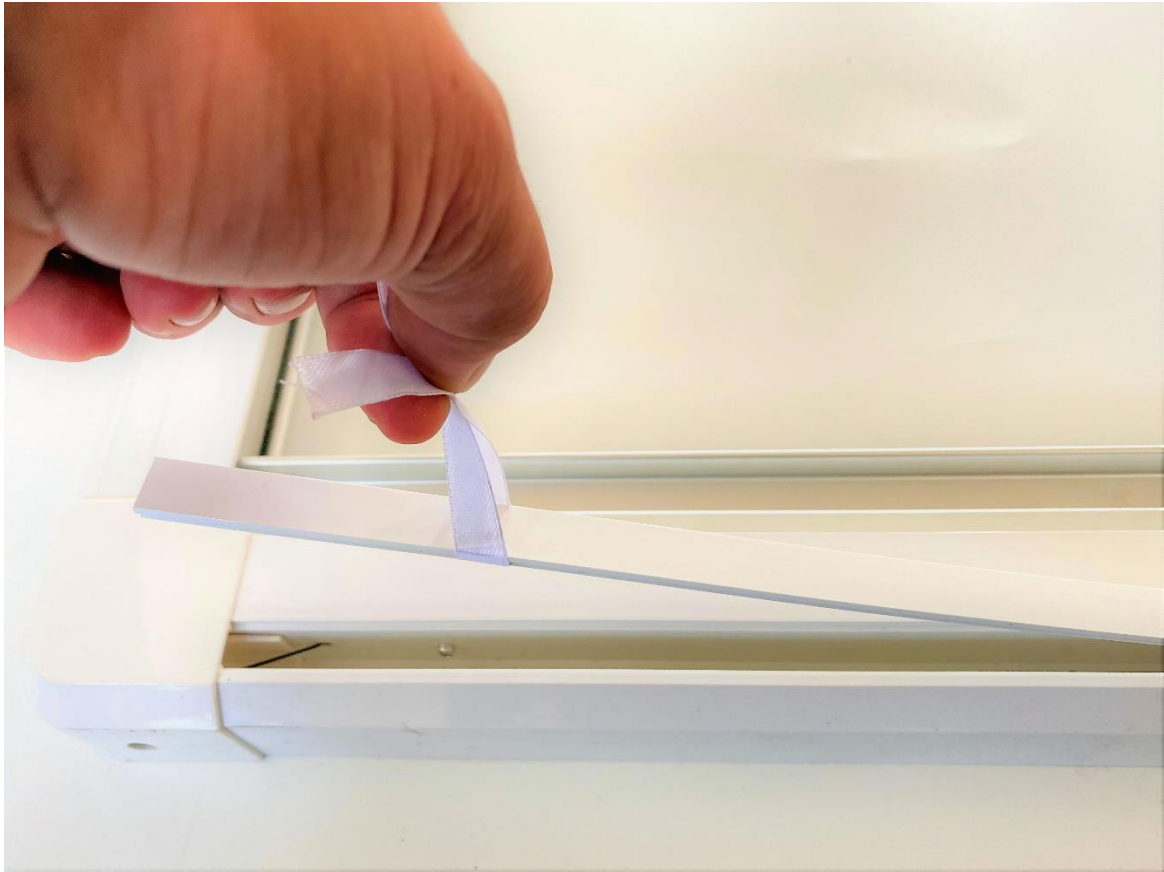


Fig 27

- Mark the location(s) of these holes (Fig 28) the inner frame (F3) making sure it is level. Once you are happy with the alignment you can drill some pilot holes using a centre punch on the marked location to avoid drill bit slipping and damaging the frame) then screw the cassette frame (F4) with some self-tapping screws to the inner frame (F3), making sure that the blackout blinds are at the bottom and close upwards.

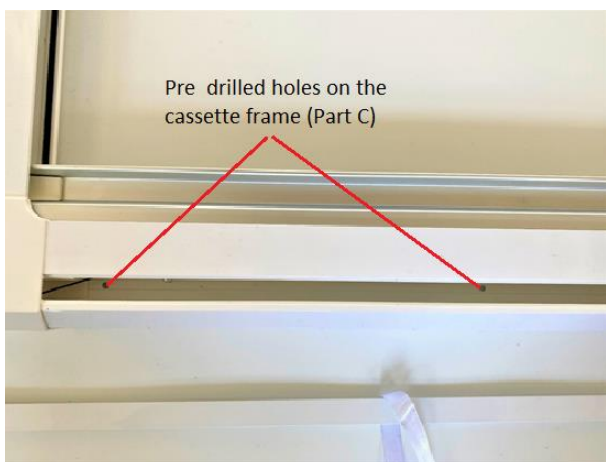


Fig 28

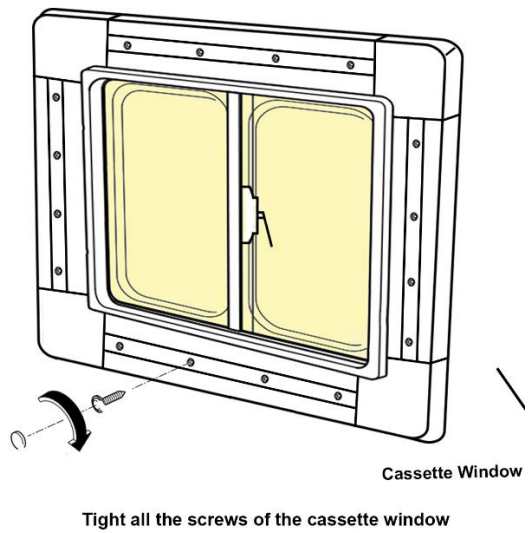


Fig 29



Fig 30

- Check that the fly screen and the blackout blind work freely

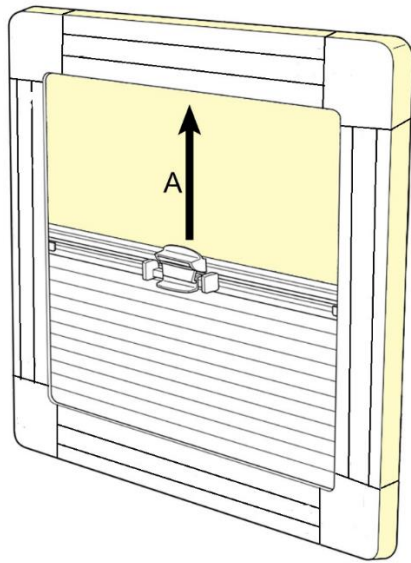


Fig 31



Fig 32

- Refit the clips

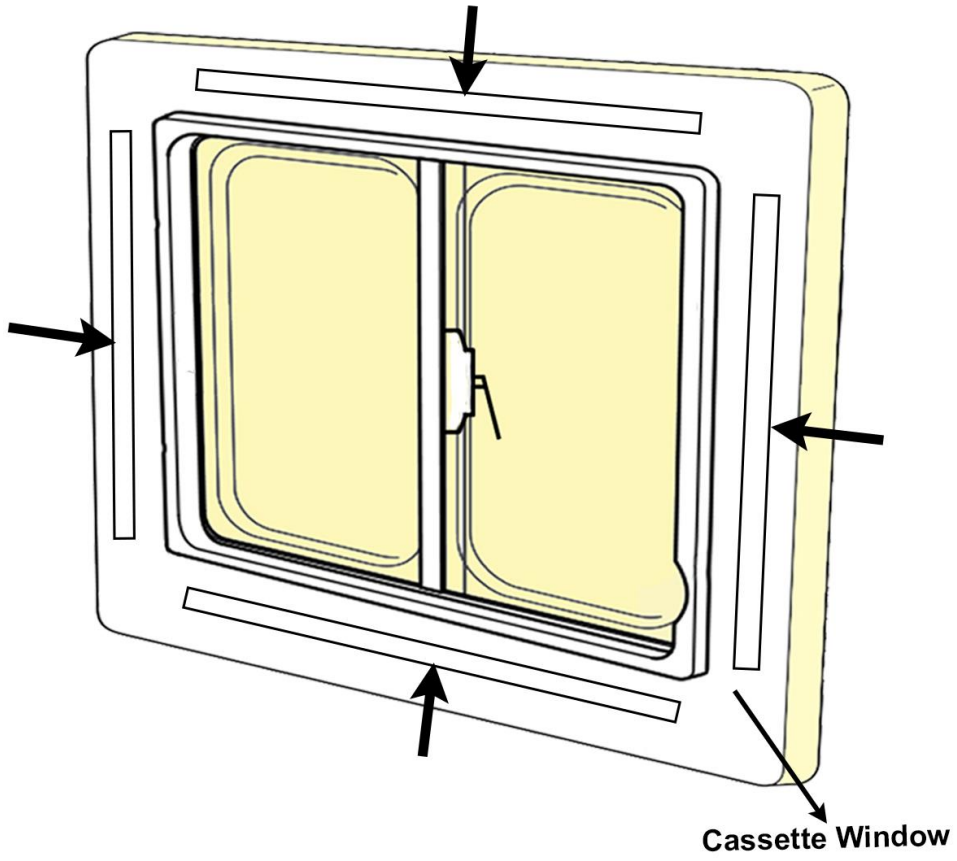


Fig 33



Fig 34

Finally, peel off the protective film from the outer cassette and remove the drain plugs from the water holes (Fig 35 -36) at the bottom of the window leaving the top plugs in.

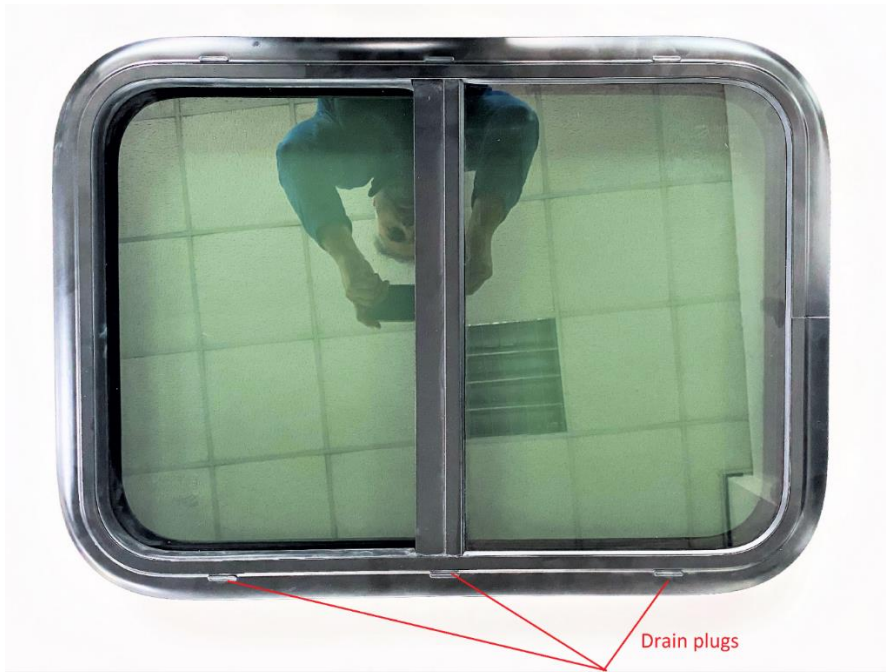


Fig 35



Fig 36

Cleaning and maintenance

Please do not use any sharp or abrasive objects to clean the windows as it will damage the acrylic glass. Only use Acrylic glass polish and a specialist polishing cloth

Use mild soap with water to clean the blind

Use rubber seal protector and conditioner to clean the rubber seal.

Warranty

The statutory warranty period applies. If the product is defective please email us on info@shieldautocare.co.uk.

Exclusions apply

If the window are fitted incorrectly, defective workmanship or damaged caused by inappropriate misuse.

Right to return for faulty good is 28 days, the return window must be in its original condition and packaging.

Disposal

Please recycle the packaging by placing them in the appropriate recycling bins